

# VALVE CHANGE PROCEDURE

**IMPORTANT:** DURING ALL OPERATIONS, THE VALVE MUST BE MAINTAINED AND PRESSED AGAINST A FLAT AND STRONG SURFACE TO AVOID LOSING THE INNER PART INSIDE THE FENDER.

- 1- DEFLATE THE FENDER AND MAINTAIN IT FLAT ON FLOOR OR A TABLE (SEE PICTURE BELOW)



2- INSERT THE TOOL INTO THE VALVE AND ROTATE COUNTERCLOCKWISE TO REMOVE THE OLD VALVE



3- MAKE SURE THERE IS NO SCRAP OR DUST, OTHERWISE GENTLY CLEAN WITH PREMOISTENED WIPE



4- PUT THE NEW VALVE AND ROTATE CLOCKWISE



5- TIGHTEN THE VALVE BY USING THE TOOL PROVIDED