

# Installation and Maintenance Manual

MRPW-05

## Performa™ Winch

**46.2 STP**  
**46.2 STQP**



**HARKEN®**

<b>Introduction</b>	3
<b>Technical characteristics</b>	3
<i>Performance data</i>	3
<i>Weight</i>	3
<i>Maximum working load</i>	3
<b>Technical characteristics - Winch Quattro Performa</b>	4
<i>Performance data</i>	4
<i>Weight</i>	4
<i>Maximum working load</i>	4
<b>Outline</b>	3
<i>Winch 46.2 STP</i>	3
<b>Outline - Winch Quattro Performa</b>	4
<i>Winch 46.2 STQP</i>	4
<b>Installation</b>	5
<i>Installation procedure</i>	6
<i>Positioning the self-tailing arm</i>	9
<b>Maintenance</b>	9
<i>Washing</i>	9
<i>Maintenance table</i>	9
<i>Disassembly procedure</i>	9
<i>Exploded view with maintenance products</i>	13
<i>Assembly</i>	14
<b>Harken® limited worldwide warranty</b>	15
<b>Ordering spare parts</b>	15
<b>Exploded view</b>	16
<i>Performa Winch 46.2 STP</i>	16
<i>Performa Winch 46.2 STQP</i>	18
<b>Parts list</b>	20
<i>Performa Winch 46.2 STP</i>	20
<i>Performa Winch 46.2 STQP</i>	21

## Introduction

This manual gives technical information on winch installation and maintenance, including disassembling and reassembling.

This information is DESTINED EXCLUSIVELY for specialised personnel or expert users.

Installation, disassembling and reassembling of the winch by personnel who are not experts may cause serious damage to users and those in the vicinity of the winch.

Harken® accepts no responsibility for defective installation or reassembly of its winches.

In case of doubt the Harken® Tech Service is at your disposal at [techservice@harken.it](mailto:techservice@harken.it)

This Manual is available only in English. If you do not fully understand the English language, do not carry out the operations described in this Manual.

## Technical characteristics

	Power ratio	Gear ratio
1st speed	11,70 : 1	2,30 : 1
2nd speed	46,50 : 1	9,20 : 1

*The theoretical power ratio does not take friction into account.*

### Weight

	ST Version
Weight (Kg)	5,2


### Maximum working load



#### **WARNING!**

The maximum working load (MWL) for the 46.2 ST Performa™ Winch is 1300Kg (2866 lb). Subjecting the winch to loads above the maximum working load can cause the winch to fail or pull off the deck suddenly and unexpectedly during high loads causing severe injury or death.

## Outline

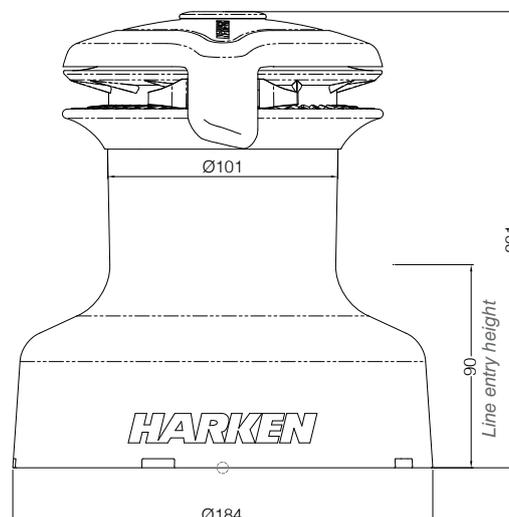

**Technical characteristics - Winch Quattro Performa**

Dual Drum Winch: upper drum and lower drum.  
 LD refers to the lower drum  
 See Outline for dimensions

	Power ratio	Power ratio LD	Gear ratio
1st speed	11,70 : 1	6,23 : 1	2,30 : 1
2nd speed	46,60 : 1	24,79 : 1	9,17 : 1

*The theoretical power ratio does not take friction into account.*

Weight

	ST
weight (Kg)	6,2


Maximum working load



**WARNING!**

The maximum working load (MWL) for the 46.2 STQP Performa™ Winch is 1300 Kg (2866 lb).  
 The maximum working load (MWL) for the 46.2 STQP Performa™ Winch relative to the lower drum is 500 Kg (1102 lb).  
 Subjecting the winch to loads above the maximum working load can cause the winch to fail or pull off the deck suddenly and unexpectedly during high loads causing severe injury or death.

**Outline**

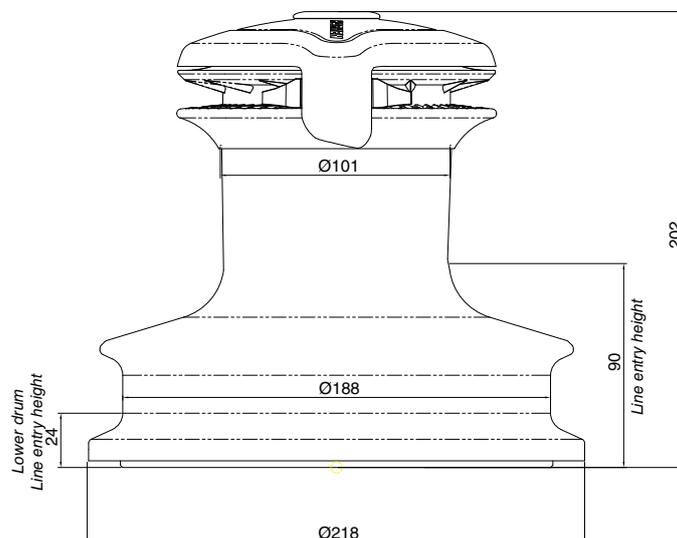

## Installation

The winch must be installed on a flat area of the deck, reinforced if necessary to bear a load equal to at least twice the maximum working load of the winch.

It is the installer's responsibility to carry out all structural tests needed to ensure that the deck can bear the load.

Harken® does not supply the screws needed to install the winch since these may vary depending on the deck on which it is to be installed.

It is the installer's responsibility to choose the correct screws taking account of the loads they will have to bear.

Harken® assumes no responsibility for incorrect installation of its winches or for an incorrect choice of mounting screws.



### DANGER!

Incorrect installation of the winch may cause severe injury or death. Consult the yard that built the boat in the case of doubt over the correct positioning of the winch.




### WARNING!

Failure to use the correct number and type of mounting fasteners or failure to ensure the correct deck strength can result in the winch pulling off the deck suddenly and unexpectedly during high loads causing severe injury or death.




### WARNING!

Verify the entry angle of the sheet. This must be  $8^\circ$  with tolerance of  $\pm 2^\circ$ , to avoid sheet overrides and damaging the winch or making the winch inoperable leading to loss of control of the boat which can lead to severe injury or death.

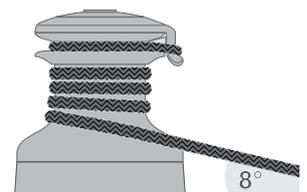

### WARNING!

Mount the winch on the deck so that the drive gear is positioned where the sheet enters the winch drum. Incorrect position of drive gear can weaken winch leading to failure which can cause an accident leading to severe injury or death.

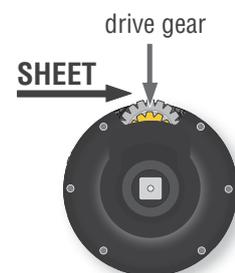

Once you have chosen the correct mounting position for the winch on the deck proceed with installation.

## Procedure

To install the winch you must remove the drum and use Socket Head (SH) bolts.

### Tools needed

 One medium flat-bladed screwdriver

To identify the various parts, refer to the exploded view at the end of this Manual.

 Torque to apply when assembling



1. Unscrew the central screw ( $\approx 2\text{Nm}/18\text{ in-lb}$ )



2. Slide off the assy socket n°27 and the cover n°26



3. Unscrew the three screws n°25 ( $\approx 4\text{Nm}/35\text{ in-lb}$ )



4. Remove the stripper arm n°24 by rotating and lifting it.



5. Lift off the drum n°28

Install the winch on the deck in the position you have chosen, keeping in mind the limits described on page 3. (See paragraph on installation)

**Installation procedure**


Carry out the **Procedure**, then install the winch on the deck in the chosen position.

- A.** Position the base of the winch on the deck and mark the position of the holes or use the drilling cut-out template at the point where you have decided to place the winch.


Below is a reduced scale diagram.

The drilling cut out template is available on the Harken® website, [www.harken.com](http://www.harken.com)

Winch STP

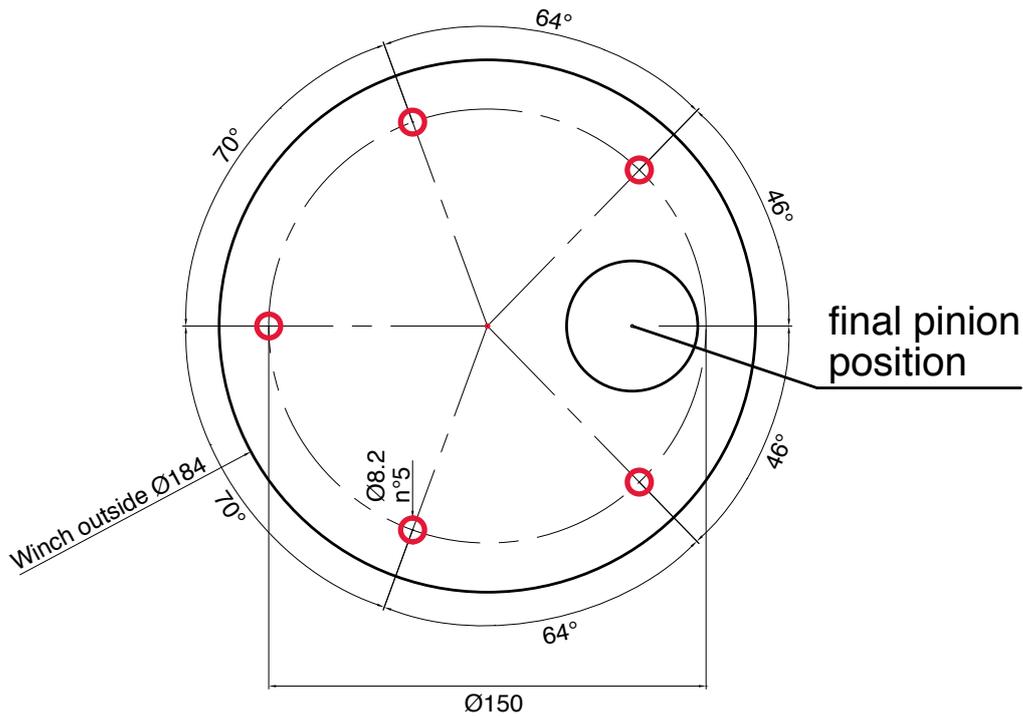

Winch STQP

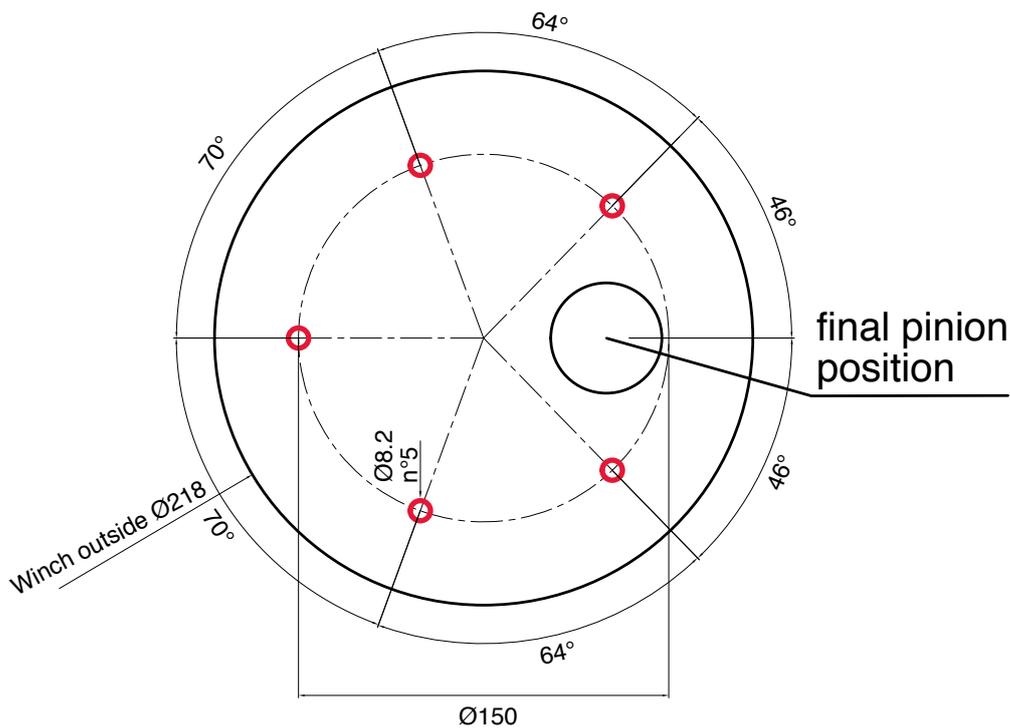

- B.** Remove the winch and drill the five 8.2 mm diameter holes.
- C.** Bolt the base of the winch to the deck using five M8 bolts (not supplied by Harken®), correctly chosen for the thickness and type of the boat deck. Consult the yard that built the boat in case of doubt.

**WARNING!**

To install the winch on the deck, use only bolts in A4 stainless steel (DIN 267 part11). Bolts made of other materials may not have sufficient strength or may corrode which can result in winch pulling off deck suddenly and unexpectedly during high loads causing severe injury or death.

**NOTICE**

To mount winches on the deck, do not use countersunk bolts.

- D.** Fill the mounting holes with a suitable marine sealant.
- E.** Remove the excess adhesive/sealant from the holes and base drainage channels
- F.** Reassemble the winch following the steps of the **Procedure** in the reverse order, and apply the products indicated in the section on maintenance.

## NOTICE

Before closing the winch, make sure the holes and drainage channels in the base of the winch are not obstructed.

### Positioning the self-tailing arm

Position the self-tailing arm so that the line leaving the winch is led into the cockpit.

## Maintenance

---

### Washing

Winches must be washed frequently with fresh water, and in any case after each use.

Do not allow teak cleaning products or other cleaners containing caustic solutions to come into contact with winches and especially anodised, chrome plated or plastic parts.

Do not use solvents, polishes or abrasive pastes on the logos, on the stickers on the winches or on any anodized, chrome plated and plastic surfaces.

Make sure that the holes and drainage channels in the base of the winch are not obstructed so that water does not collect.

### Maintenance table

Winches must be visually inspected at the beginning and end of every season of sailing or racing.

In addition they must be completely overhauled, cleaned and lubricated at least every 12 months.

After an inspection, replace worn or damaged components. Do not replace or modify any part of the winch with a part that is not original.



### **WARNING!**

Periodic maintenance must be carried out regularly. Lack of adequate maintenance shortens the life of the winch, can cause serious injury and also invalidate the winch warranty.

Installation and maintenance of winches must be carried out exclusively by specialized personnel.

In the case of doubt contact Harken® Tech Service at [techservice@harken.it](mailto:techservice@harken.it)

### Disassembly procedure

#### *Tools needed*



One medium flat-bladed screwdriver

A number five hex key



Rags

To identify the various parts refer to the exploded view at the end of this Manual.

 Torque to be applied in assembly phase

Carry out procedure as shown in the paragraph on winch installation and then do the following:



6. Completely unscrew the three screws n° 26 and remove the stripper arm support n°21



7. Slide out the central shaft n°19



9. Unscrew the 5 hex screws n°16  
( $\approx 20\text{Nm}/177\text{ in-lb}$ )




9. Remove the assy housing n°15  
Important: washer n°13 may remain inside the drum support!



10. Remove the gear n°14



11. Remove the washer n°12

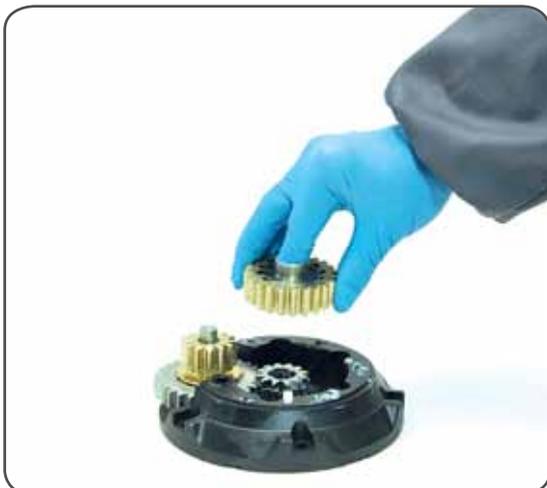

12. Remove gear n°9 and remove the pawls n°7. To facilitate the operation press the spring against the pawl with a blade.



13. Slide off gear n°2



14. Remove the pinion n°10.



15. Slide off gear n°5



16. Remove the washer n°4.

If it is necessary to replace any **jaws** of the winch, proceed as follows:



I. Unscrew the 4 screws n°23  
( $\approx 4\text{Nm}/35\text{ in-lb}$ )



II. Remove the jaws n°22

Inspect balls inside the drum and carefully check the correct position; if it is necessary to put back any balls, push balls in the race (as shown below):



Once the winch is completely disassembled, clean the parts: use a basin of diesel oil to soak metal components and rinse plastic parts in fresh water. Once you have done this, dry the parts with cloths that do not leave residue.

Inspect gears, bearings, pins and pawls for any signs of wear or corrosion.


Carefully check the teeth of gears and ring gears to make sure there are no traces of wear.

Check the roller bearings and check there are no breaks in the bearing cages.  
Replace worn or damaged components.

Carry out maintenance on components using the products listed below.

For more information on which products to use where, refer to the exploded diagram below.

Use a brush to lightly lubricate all gears, gear pins, teeth and all moving parts with grease.  
Lightly lubricate the pawls and springs with oil. Do not use grease on the pawls!

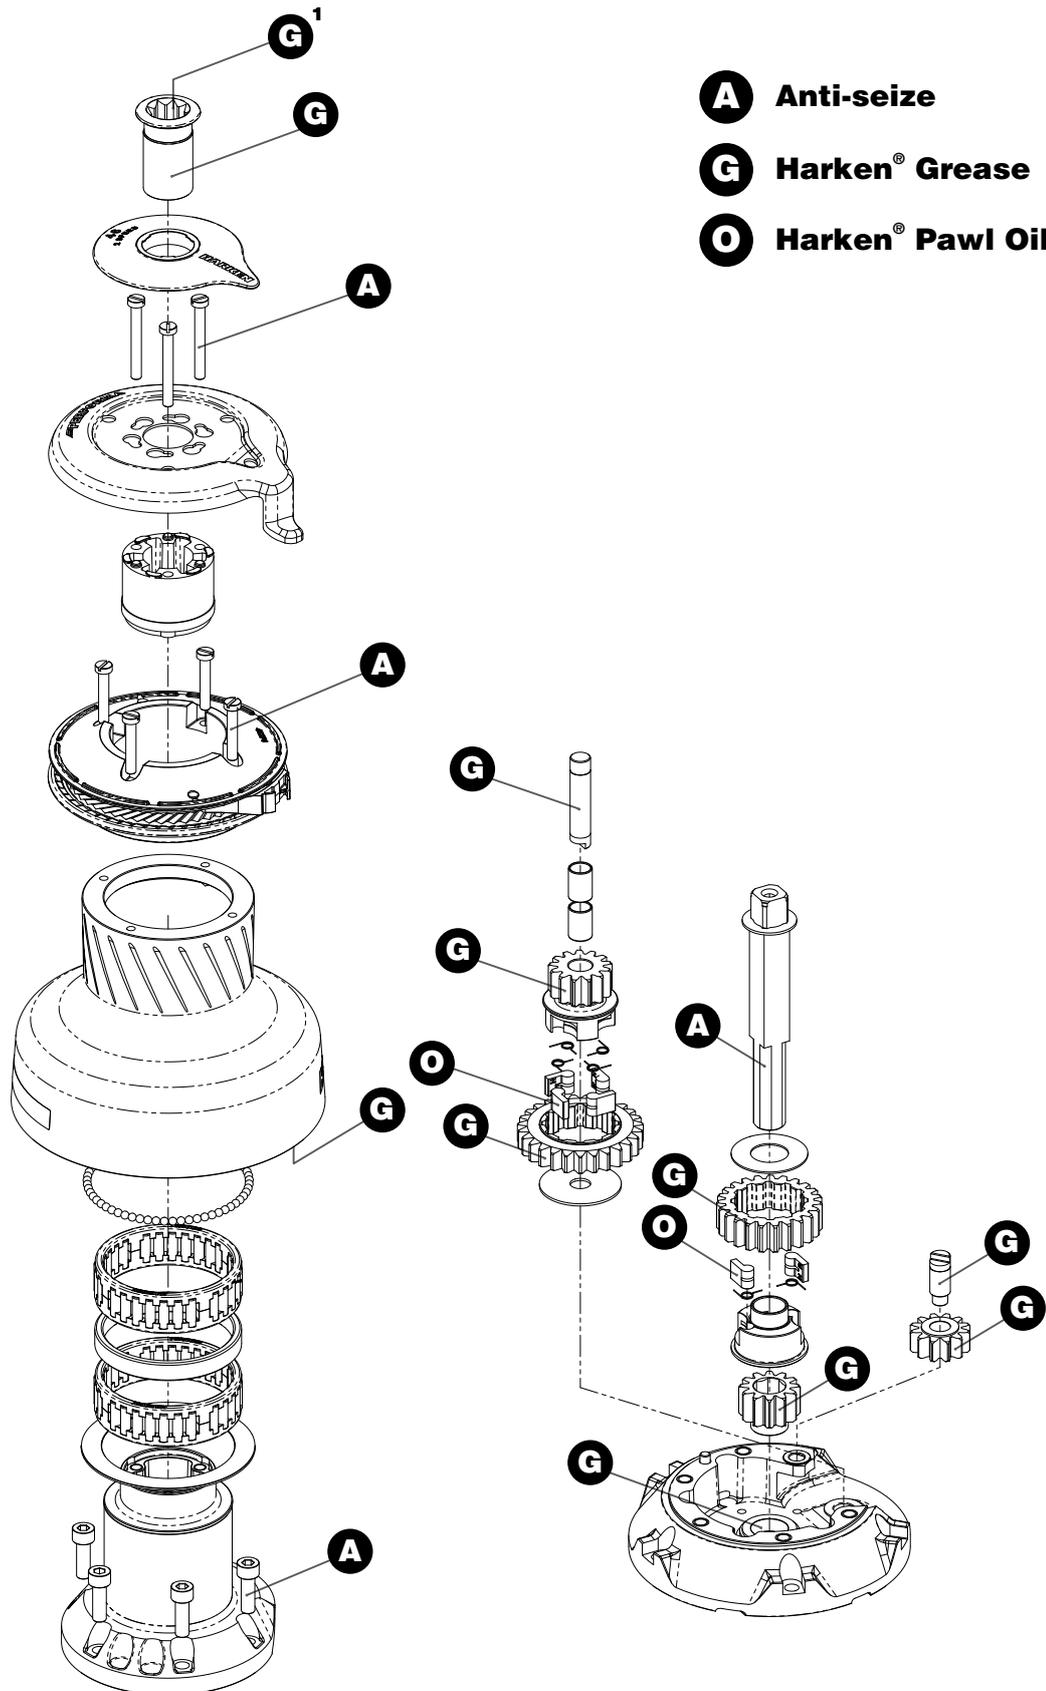Exploded view with maintenance products

<sup>1</sup>Apply Harken® grease on assy socket screw

## Assembly

Make sure that the holes and drainage channels in the base of the winch are not obstructed. Assemble the winch in the reverse order of the sequence in the section on disassembly.


To tighten bolts, use the torque indicated in the disassembly procedure.



If the jaws have been disassembled, insert peeler between the two jaws, taking care that the letters TOP on the peeler are facing upwards.



When positioning the stripper arm, align the peeler with it.

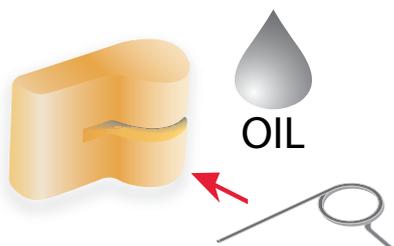

### **To assemble the pawls:**

correctly position the spring in its housing as shown at left. Hold the spring closed and slide the pawl into its housing. Once in position, check that the pawls can be easily opened and closed with a finger.

In case of doubt concerning the assembly procedure contact Harken® Tech Service: [techservice@harken.it](mailto:techservice@harken.it)

## Harken® limited worldwide warranty

Refer to the Harken® Limited Worldwide Warranty in the Harken® Catalogue and on the website [www.harken.com](http://www.harken.com)

## Ordering spare parts

Spare parts can be requested from Harken® as described in the Harken® Limited Worldwide Warranty, indicating the part number in the Parts List and including the serial number of the winch for which the parts are required.

***The serial number of the winch is printed on a plate on the drum support of the winch.***



### Manufacturer

#### **Harken® Italy S.p.A.**

Via Marco Biagi, 14  
22070 Limido Comasco (CO) Italy  
Tel: (+39) 031.3523511  
Fax: (+39) 031.3520031  
Email: [info@harken.it](mailto:info@harken.it)  
Web: [www.harken.com](http://www.harken.com)

● **Tech Service**  
Email: [techservice@harken.it](mailto:techservice@harken.it)

● **Customer Service**  
Tel: (+39) 031.3523511  
Email: [info@harken.it](mailto:info@harken.it)

### Headquarters


#### **Harken®, Inc.**

1251 East Wisconsin Avenue  
Pewaukee, Wisconsin 53072-3755 USA  
Tel: (262) 691.3320  
Fax: (262) 691.3008  
Email: [harken@harken.com](mailto:harken@harken.com)  
Web: [www.harken.com](http://www.harken.com)


● **Tech Service**  
Email: [technicalservice@harken.com](mailto:technicalservice@harken.com)

● **Customer Service**  
Tel: (262) 691-3320  
Email: [customerservice@harken.com](mailto:customerservice@harken.com)


Performa Winch 46.2 STP

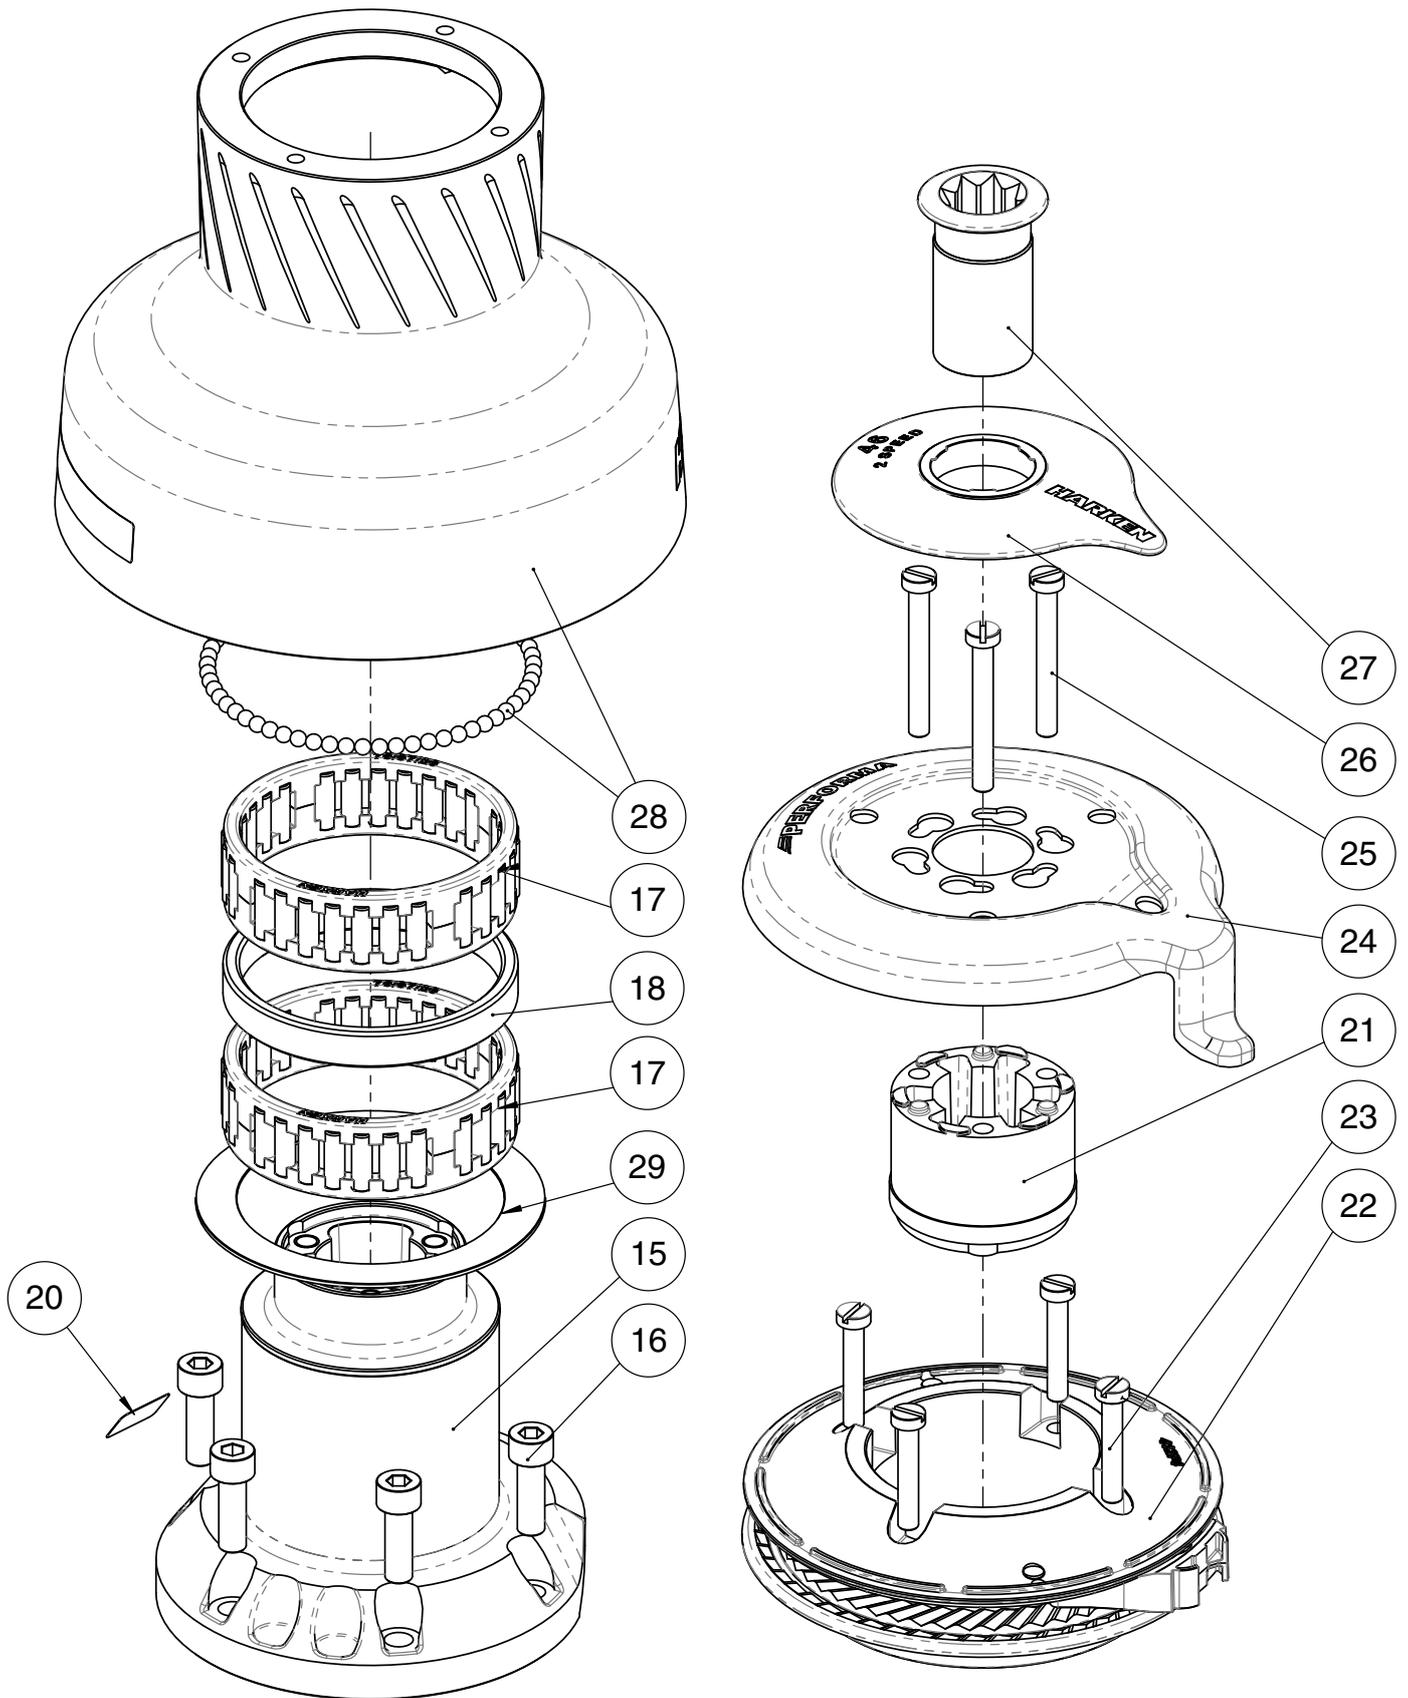


Performa Winch 46.2 STP

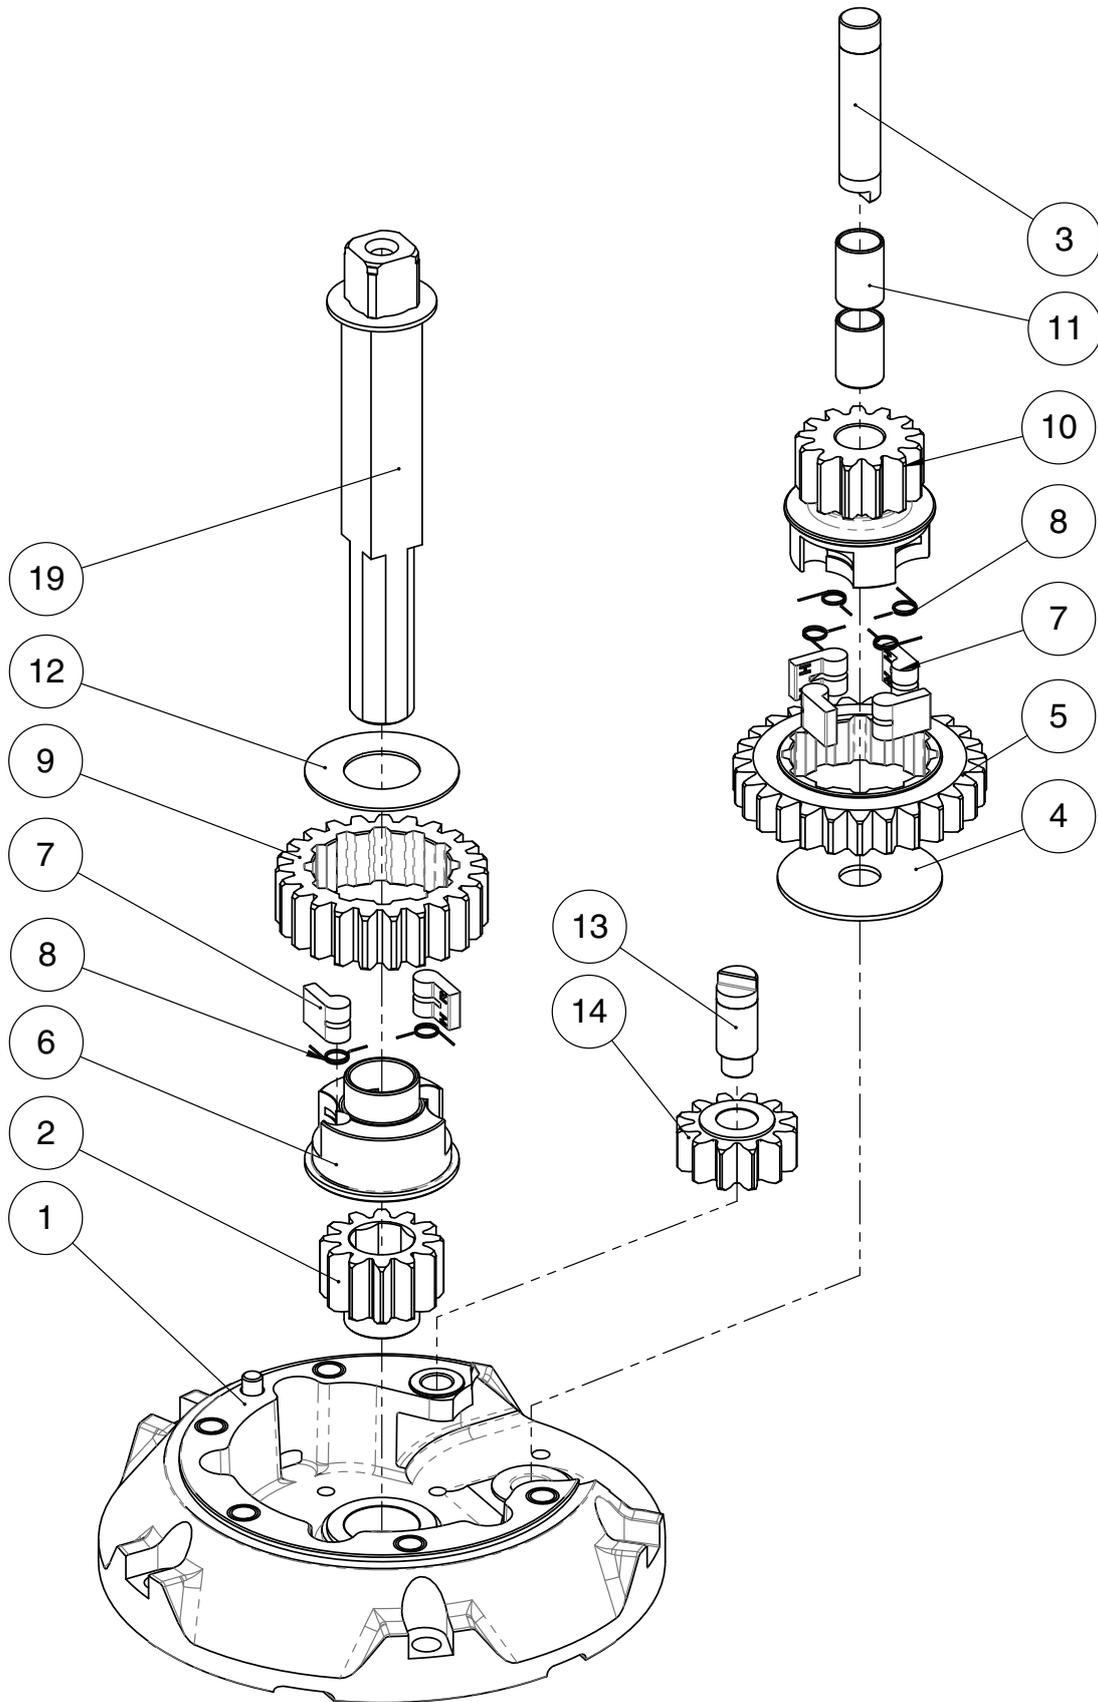

Performa Winch 46.2 STQP

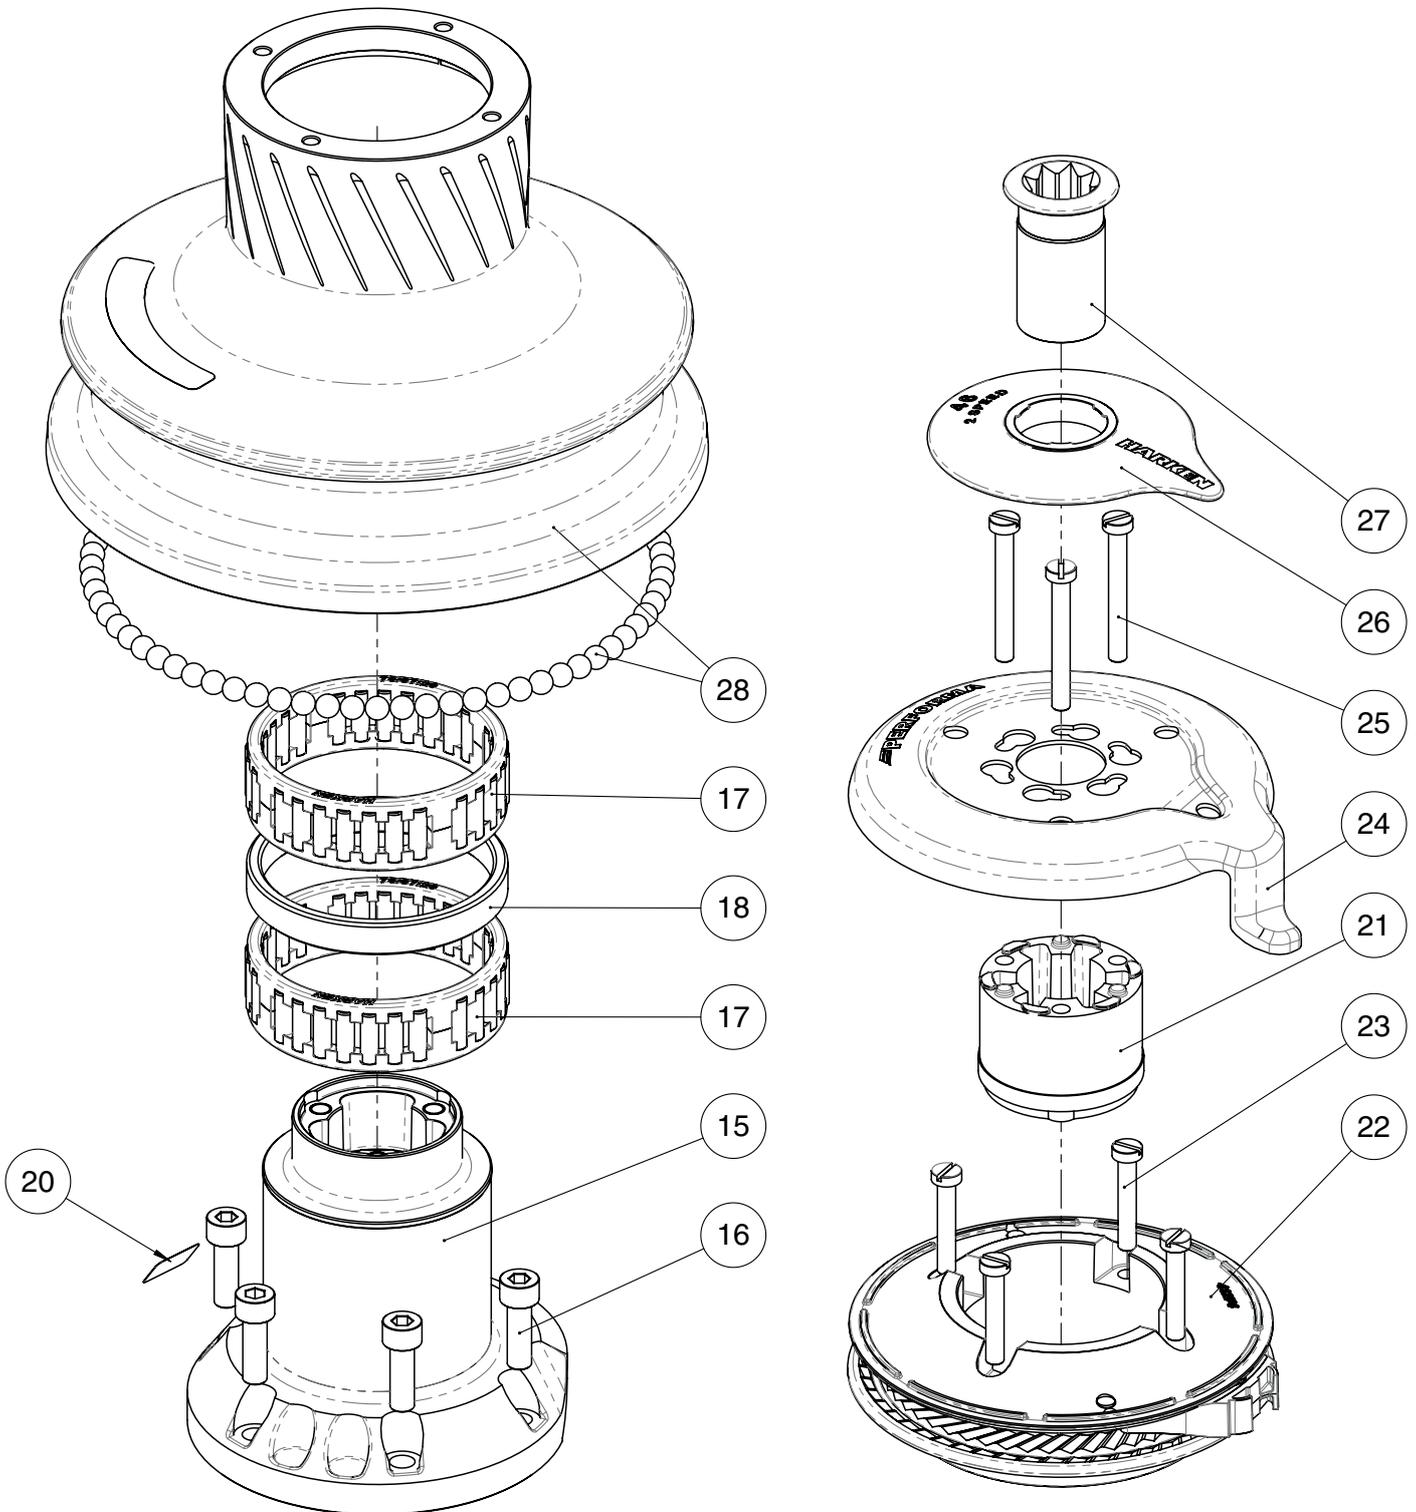

Performa Winch 46.2 STQP

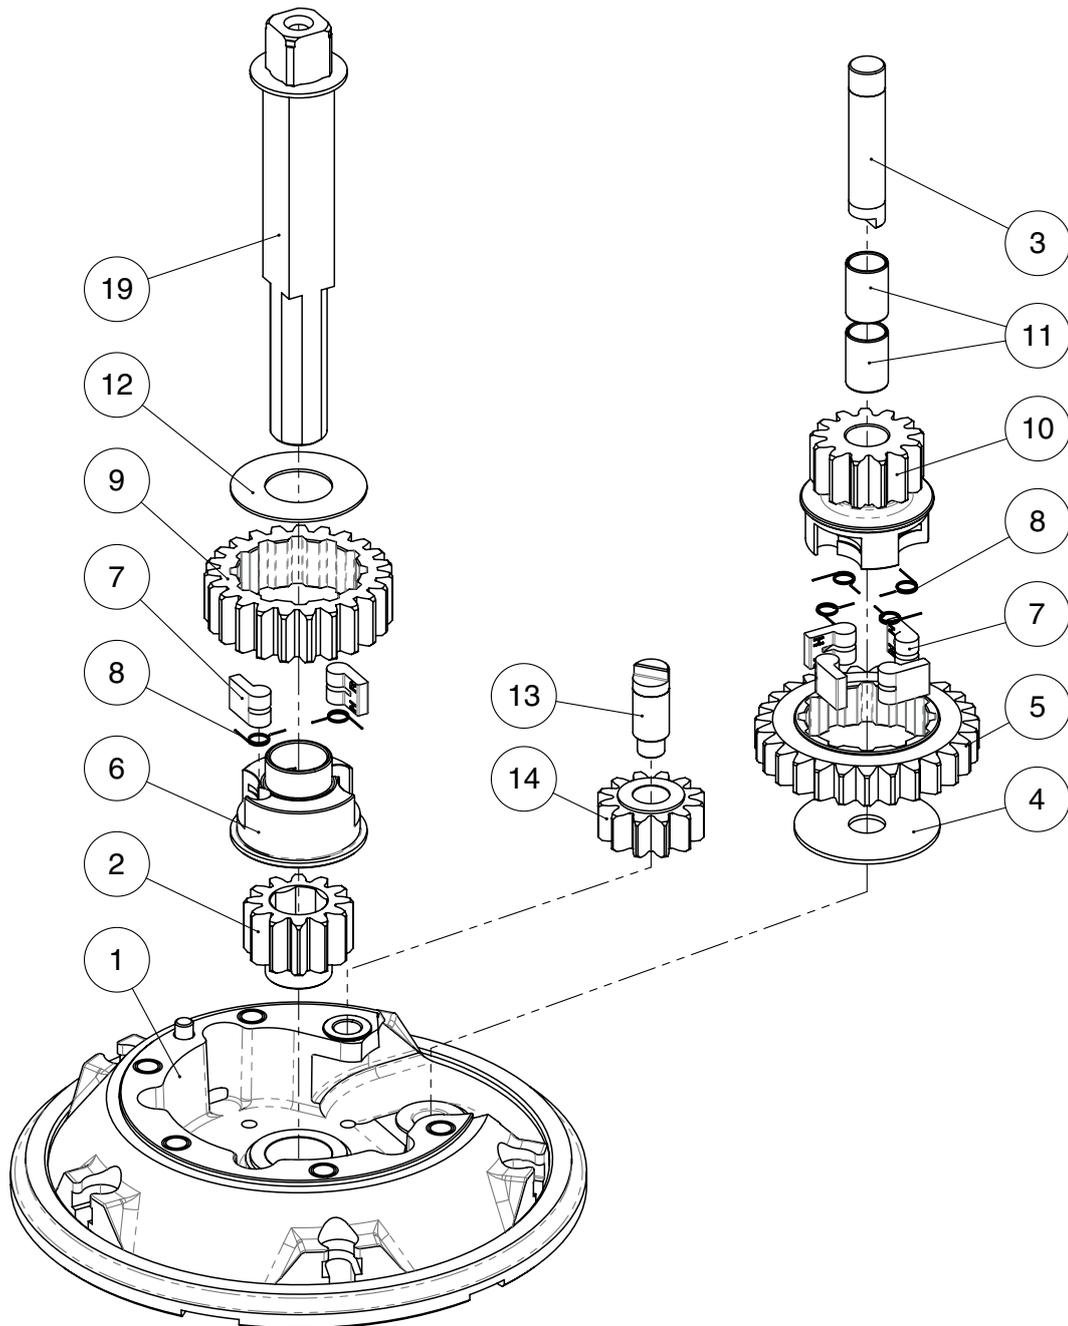

## Performa Winch 46.2 STP

Pos	Q.ty	Code	Description	Pos	Q.ty	Code	Description	
1	1	A96633300	PERFORMA Assy Base Winch 46	17	2	A74133700	Bearing Ø75xØ87x26	
			<i>PERFORMA Base W46</i>	18	1	S413390080	Spacer	
	1	S413350080	<i>Heli-coil M8x10</i>	19	1	A94161400	Assy Central Shaft Winch 46	
	1	S4152300A7	<i>Roller Ø6x19</i>				<i>Central shaft W46 ST</i>	
	1	S414890080	<i>Bushing Ø22xØ25x9.5</i>			1	S413880002	<i>Washer Ø17.2xØ32x1.5</i>
	1	S413330085	<i>Bushing Ø12xØ14x11</i>	20			Winch Serial Number Sticker	
2	1	S413020004	Gear Z12	21	1	S4129400A0	Stripper arm support	
3	1	S413300004	Pin Ø12x60	22	1	A96589500	Performa Assy Jaws W46	
4	1	S278170002	Washer Ø12.5xØ48x1.5				<i>Lower Jaw W46</i>	
5	1	S413260004	Gear Z27			1	S414280080	<i>Performa Upper jaw W46</i>
6	1	S414260004	Pawls Carrier Ø8xN2			4	S385970001	<i>Peeler W46 - 50</i>
7	6	S000090004	Pawl Ø8*				<i>SPRING</i>	
8	6	S000380001	Pawl Spring Ø8*	23	4	M0601803	Screw UNI EN ISO 1207:1996 - M6x35 - A4	
9	1	S412830041	Gear Z23	24	1	S657390019	Performa Black Stripper Arm W46	
10	1	S413250041	Pinion Z13	25	3	M6007103	Screw M6x50 UNI6107	
11	2	M6017694	IGUS Bushing PSM-1214-20	26	1	S4127000A5	Cover 2 speed W46	
12	1	S413120002	Washer Ø22.5xØ45x1	27	1	A94136400	Assembly Socket W20-80	
13	1	S413070004	Pin Ø9xØ12x32.5			1	S415130085	<i>Socket Handle W20/80</i>
14	1	A94133400	Assy Gear Z12			1	M0614303	<i>Washer Ø7.7xØ25x5.8</i>
	2	S414900080	<i>Gear Z12</i> <i>Bushing Ø12xØ14x8</i>				<i>Screw M8x20 UNI 6109</i>	
15	1	A94132200	Assy Housing Winch 46	28	1	A96572300	Performa W46 Drum	
			<i>Housing Winch 46</i>					<i>Performa Drum W46</i>
			<i>Heli-coil M6x9</i>			61	M0619580	<i>Ball 3/16"</i>
	1	S414900080	<i>Bushing Ø12xØ14x8</i>		1	S6572900A3	<i>Bearing ring W46</i>	
	1	S413330085	<i>Bushing Ø12xØ14x11</i>				<i>Winch Product Sticker**</i>	
	1	S4133200B3	<i>Bushing for support</i>	29	1	S657300052	Performa Shim W46	
16	5	M0606303	Screw M8x25 UNI 5931					

\*Available with service kit; see website [www.harken.com](http://www.harken.com)

\*\*Winch product sticker



## Performa Winch 46.2 STQP

Pos	Q.ty	Code	Description	Pos	Q.ty	Code	Description
1	1	A94163700	Assembly base W46Q for thrust bearing <i>Ring base W46 STQ</i> <i>Base W46</i> <i>Heli-coil M8x10</i>	17	2	A74133700	Bearing Ø75xØ87x26
	1	S413350080	<i>Roller Ø6x19</i>	18	1	S413390080	Spacer
	1	S4152300A7	<i>Bushing Ø22xØ25x9.5</i>	19	1	A94161400	Assembly Central Shaft Winch 46 <i>Central shaft W46 ST</i> <i>Washer Ø17.2xØ32x1.5</i>
	1	S414890080	<i>Bushing Ø9xØ11x7</i>		1	S413880002	
	1	S413330085	<i>Bushing Ø12xØ14x11</i>	20			Winch Serial Number Sticker
2	1	S413020004	Gear Z12	21	1	S4129400A0	Stripper arm support
3	1	S413300004	Pin Ø12x60	22	1	A96589500	Performa Assembly Jaws W46 <i>Lower Jaw W46</i> <i>Performa Upper jaw W46</i> <i>Peeler W46 - 50</i> <i>SPRING</i>
4	1	S278170002	Washer Ø12.5xØ48x1.5		1	S414280080	
5	1	S413260004	Gear Z27		4	S385970001	
6	1	S414260004	Pawls Carrier Ø8xN2		23	4	M0601803
7	6	S000090004	Pawl Ø8*	24	1	S657390019	Performa Black Stripper Arm W46
8	6	S000380001	Pawl Spring Ø8*	25	3	M6007103	Screw M6x50 UNI6107
9	1	S412830041	Gear Z23	26	1	S4127000A5	Cover 2 speed W46
10	1	S413250041	Pinion Z13	27	1	A94136400	Assembly Socket W20-80 <i>Socket Handle W20/80</i> <i>Washer Ø7.7xØ25x5.8</i> <i>Screw M8x20 UNI 6109</i>
11	2	M6017694	Bushing Ø12xØ14x20		1	S415130085	
12	1	S413120002	Washer Ø22.5xØ45x1		1	M0614303	
13	1	S413070004	Pin Ø9xØ12x32.5		28	1	A94163501
14	1	A94133400	Assembly Gear Z12 <i>Gear Z12</i> <i>Bushing Ø12xØ14x8</i>	72	M0610280		
	2	S414900080					
	1	S414900080	Assembly Housing Winch 46 <i>Housing Winch 46</i> <i>Heli-coil M6x9</i> <i>Bushing Ø12xØ14x8</i>				
	1	S413330085	<i>Bushing Ø12xØ14x11</i>				
15	1	A94132200	Assembly Housing Winch 46 <i>Housing Winch 46</i> <i>Heli-coil M6x9</i> <i>Bushing Ø12xØ14x8</i>				
	1	S413330085	<i>Bushing Ø12xØ14x11</i>				
	1	S4133200B3	<i>Bushing for support</i>				
16	5	M0606303	Screw M8x25 UNI 5931				

\*Available with service kit; see website [www.harken.com](http://www.harken.com)

\*\*Winch product sticker

